

Auxiliary Hydraulics

If It Didn't Come With It, We say add it!



X-Lockout INSTALLATION INSTRUCTIONS

Mower Deck Lockout Valve for X-Series and 4x5 Garden Tractors

PREPARE TRACTOR

- 1 Park tractor safely on a level surface.
- 2 Lower mower deck fully.
- 3 Stop engine and remove key.
- 4 Allow tractor to cool.

- 5 From underneath right hand side of tractor loosen and remove line fitting connected to elo fitting.



Auxiliary Hydraulics

If It Didn't Come With It, We say add it!



- 6 Loosen jam nut and screw elbo fitting out of control valve body.



- 7 Screw ball valve into the control valve and align ball valve as shown while tightening the jam nut securely. It may be necessary to remove valve handle to facilitate installation.




Auxiliary Hydraulics

If It Didn't Come With It, We say add it!




8 Pull hydraulic line up to other end of valve and screw fitting nut onto valve. Tighten Securely.

If valve handle was removed during above step reinstall and tighten lock screw securely.

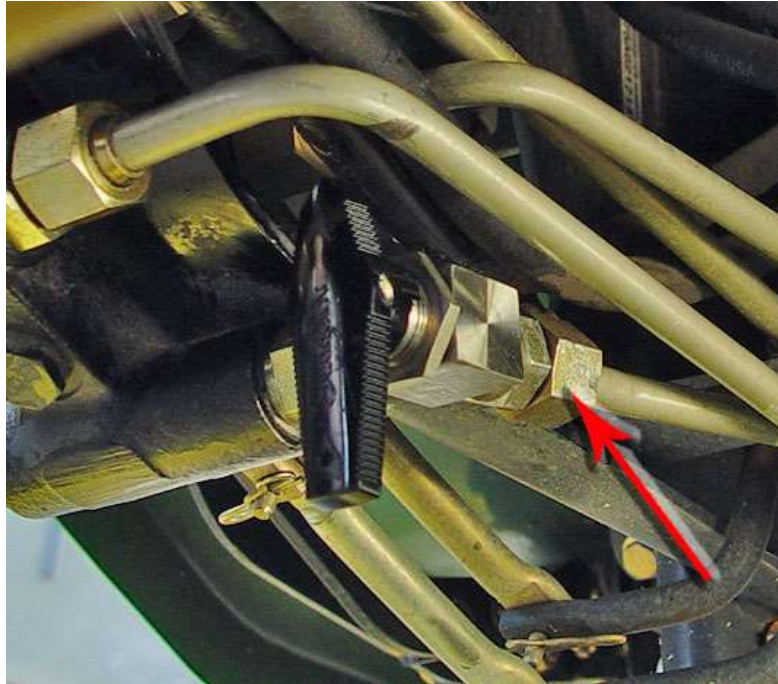

9 If it was necessary to remove the black ty-wrap during valve installation, a new one is included. If necessary, install ty-wrap now.

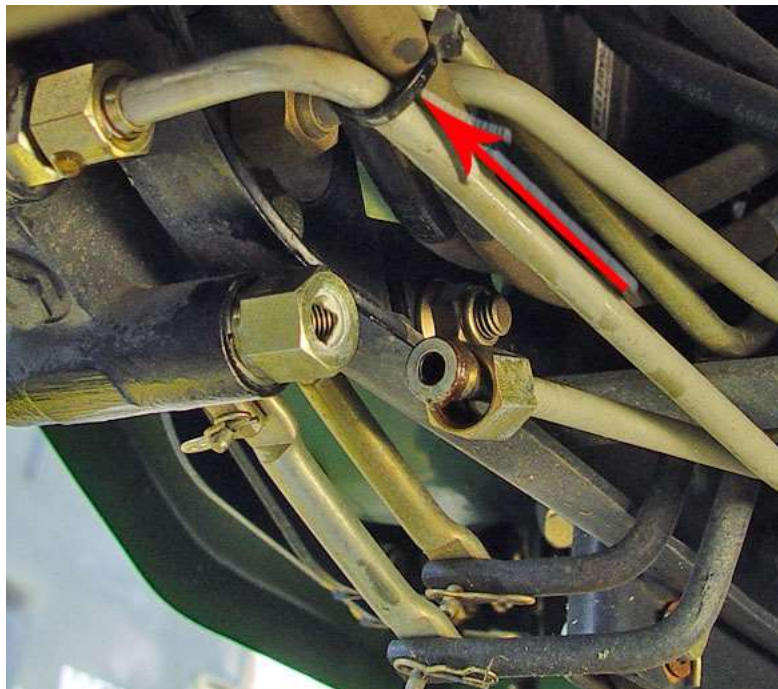

Auxiliary Hydraulics

*If It Didn't Come With It, We say **add it!***



BE CERTAIN ALL FITTINGS ARE SECURELY TIGHTENED AT THIS TIME. START TRACTOR ENGINE AND LOOK FOR LEAKS. USE A PIECE OF CARDBOARD TO “WIPE ALONG” THE HYDRAULIC PARTS WHILE CHECKING FOR LEAKS.

DO NOT USE YOUR BARE HANDS TO CHECK FOR LEAKS WHILE THE THERE IS FLUID PRESSURE IN THE SYSTEM. HYDRAULIC FLUID INJECTION THROUGH THE SKIN IS DEADLY!

THE HYDRAULIC SYSTEM IS SELF-PURGING.
Attach a hydraulic implement and cycle both circuits fully from stop to top at least three times.

YOUR HYDRAULIC KIT IS NOW READY FOR USE

The valve is shown in the OFF position.

